


**SKU # 492 092**

**YOW SKU # 576 806**

**MODEL # TY78-797-200L**

## USE AND CARE GUIDE

### 6.5FT PRE-LIT POTTED PINE TREE WITH DECORATIONS

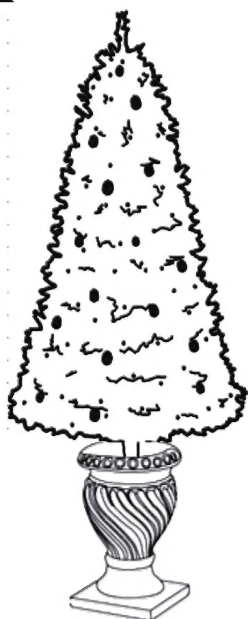

#### THANK YOU

We appreciate the trust and confidence you have placed in Home Accents through the purchase of this 6.5FT PRE-LIT POTTED PINE TREE WITH DECORATIONS. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Accents!

#### Guarantee

##### What is Covered

The product is intended for residential seasonal use for approximately 90 days per year. This product is covered by a 90 day limited guarantee due to defects in material and workmanship. Return the product with purchase receipt to the location of purchase for refund within 90 days of purchase.

##### What is Not Covered

This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse or accidents.

Questions, problems, missing parts? Before returning to the store, call Customer Service 8 a.m.-6 p.m., EST, Monday-Friday

**1-877-527-0313**


**HOMEACCENTSHOLIDAY.COM**

## Pre-Assembly

### PLANNING ASSEMBLY

Carefully remove all the parts from the box and place them on a flat surface. Read the entire manual prior to assembly and identify all the parts included in the package against the parts list. If any parts are missing or damaged do not attempt assembly. Contact our customer service center or return to store. Assembly of this product may require more than one person.

### PACKAGE CONTENTS

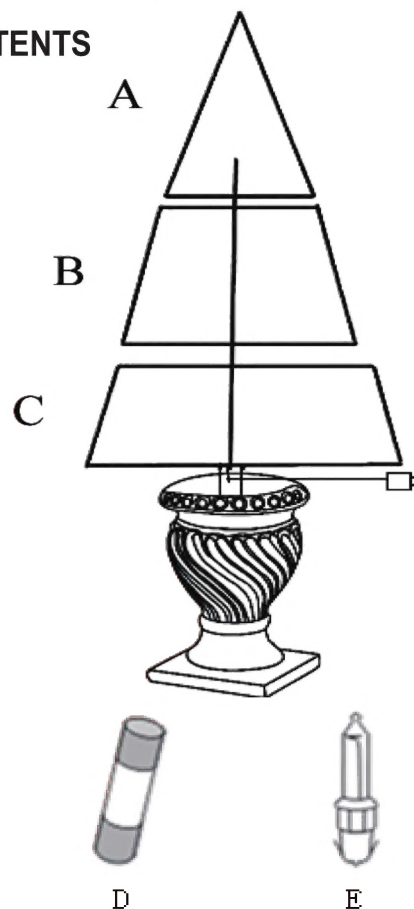

Package Contents/Parts List		
Part	Description	Quantity
A	Top part of Tree	1
B	Middle part of Tree	1
C	Bottom part of Tree with Pot	1
D	Spare fuse	2
E	Spare bulb	6

## Assembly

### Assembling the tree

- Step 1. Choose a location near a wall outlet or have an extension cord plugged in and ready to use. Be sure to use a flat, stable surface when in use.
- Step 2. Stand the Bottom part of Tree with Pot (C) on the floor.
- Step 3. Insert the pole of the Middle part of Tree (B) into the Bottom part of Tree with Pot (C).
- Step 4. Insert the pole of the Top part of Tree (A) into the Middle part of Tree (B).
- Step 5. Shape the branches to your preference by working from the bottom to the top. When adjusting branches ensure that all wires are free of branch hinges.
- Step 6. When finished shaping slightly upsweep branches for a uniformed look to achieve your desired look.

## Operation

### Turning on the tree

NOTE: If some bulbs do not light or flicker, search for any loose plugs and/or broken, loose, or missing bulbs. Replace bulbs promptly with the replacement bulbs provided in order to maintain the performance and life expectancy of your tree.

- Step 1. Connect the light strings of the tree sections together and plug the power cord into a wall outlet or approved power cord.

## Maintenance

### Spare parts

This Tree package includes replacement bulbs and fuses for your tree.

### Care and Cleaning

- Step 1. Remove all ornaments and decorations from Tree.
- Step 2. Unplug the cord from the power source and then unplug each section of the Tree from each other.
- Step 3. Gently lift the Top part of Tree straight up to remove from the Middle part of Tree and fold all branches towards the pole.
- Step 4. Repeat this step for the Middle part and Bottom part of Tree sections.
- Step 5. Carefully place all Tree sections into a storage box and secure the cover.
- Step 6. Store your tree in a cool, dry place away from sunlight.

## Troubleshooting

Problem	Solution
The tree does not light	Ensure that all tree sections are plugged into each other and that the tree is plugged into a power source. If your tree came with a foot pedal, step on the On/Off button.
	Check for blown fuses on the light strings and power cord plugs. Replace as needed with the replacement fuses provided.
	Check for loose, broken, or missing bulbs and replace as needed with the replacement bulbs provided.

**FOR INDOOR AND OUTDOOR USE**